


PREPARE THE MACHINE FOR OPERATION

To attach the drive block or brush or other attachment, be sure the handle is “locked” in the upright position (*See picture #1*). Lay the floor machine on its back with the handle lying on the floor; this exposes the driving plate on the underside of the floor machine. Holding the drive block, brush or attachment in both hands and straddling the motor with your back to the handle box, bend over and fit the three slots of the clutch plate (built into the back of the brush) over the three lugs of the driving plate. Turn the drive block, brush or attachment counter-clockwise as far as it will go until it is seated in the ready-to-use position. (*See picture #2*)

Picture #1

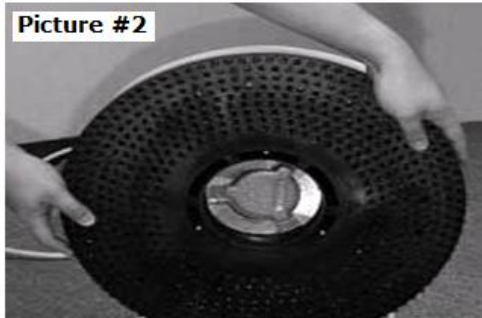

CAUTION: This is the only proper way to install a drive block, brush or attachment. **NEVER** put a drive block, brush or attachment on the machine by placing it on the floor and moving the running machine over it, or by placing the machine over the block or attachment and then starting the motor. Return the floor machine to upright position and adjust handle to operating position. Recommended handle position is close to the waist with arms extended down. Lock the cam release lever into position.

NOTE: *The hardened steel cam release lever does not require extreme tightening to effectively hold the handle in position. Over-tightening will shorten the functional life of the lever. To remove drive block, brush or attachment: Lay the floor machine on it's back again and disengage clutch plate slots from driving plate lugs by turning clockwise.*

HOW TO OPERATE THE MACHINE

With the drive block and pad, brush or attachment in the ready-to-use position, the handle locked at the desired operating height, and the electric cable plugged in, place hands on the handle grips and squeeze the switch triggers beneath the handle grips. (*See picture #3*) This activates the motor and starts the block, brush or attachment in operation. **CAUTION:** *When leaving the machine unattended, disconnect the wall plug and return the handle to the “locked” upright position to prevent accidental starting.*

Picture #3



TO GUIDE YOUR FLOOR MACHINE

To Right: raise handle slightly. The higher the handle is lifted, the faster the machine will move to the right.
To Left: to change direction, lower the handle until the machine travels to the left. The more the handle is lowered, the faster the movement to the left.