


How To Load A Spa


1. Center the spa on the SpaKart™--and position and tighten the Ratchet Straps to secure the spa to the SpaKart™. For round spas, hook one Ratchet Strap to the metal loop on each Steerable Axle and position the strap from front to back on the SpaKart™.
2. Pull the pin in each Steerable Axle that prevents the axle from steering and use this pin to attach a T-Handle to each axle.
3. You are now ready to roll the SpaKart™ with the spa on board.

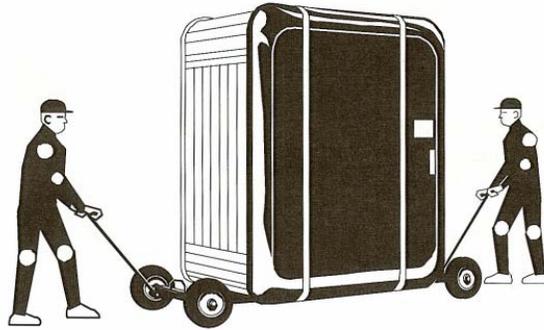

How To Unload A Spa From The SpaKart™ ...

1. Position the loaded SpaKart™ so that the spa will be in position for installation when it is tipped off of the Kart.
2. Block the SpaKart™ tires to prevent them from rolling.
3. Remove the Ratchet Straps.
4. Slide the spa to the edge of the SpaKart™ until it begins to tip, then slowly lower it to the ground.

This will keep the spa cabinet away from the strap loops welded to the side of the Kart frame. (Depending on the weight of the spa, two people will be needed to tip the spa off of the SpaKart™.) When tilting spas off of the SpaKart™, always hold the spa securely and move with the spa to avoid tipping spa too quickly.

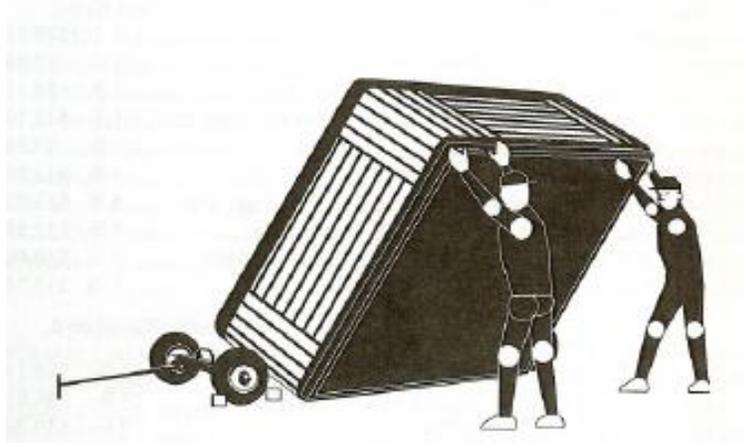

A pin is used to connect the T-handle to the Kart axle. This same pin is used to lock the steering when handle is removed.

Straighten wheels and place pin through this hole to lock the steering.

The distance between the axles on the SpaKart™ is adjustable. A pin with lynch pin through axle receiver and axle arm at each end holds axles in place, and is used for this adjustment. Always secure the spa to the SpaKart™ with the ratchet straps.

Four ratchet strap loops are found on Kart frame.

The axle receivers are flush on the top side of the Kart frame. They are of thicker material than the rest of the frame, and so protrude below the frame on the bottom side.

